


USER GUIDE

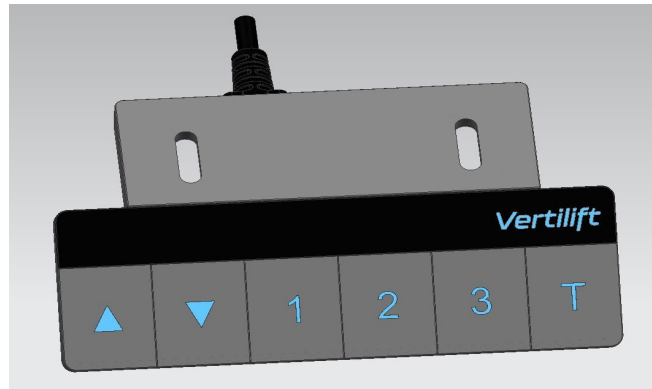

Adjusting the desk height:

- Desk height is adjusted using the UP and DOWN arrow buttons.
- Buttons must be pressed and held to move the legs up and down.
- Releasing the button will stop movement.

Setting pre-set memory positions:

- Follow the steps above to raise or lower desk to the desired height.
- Press the 1 and 2 button quickly followed by a number (1 - 3) to save the pre-set height to the memory.
- Each memory number (1-3) can be programmed to a different height and can be overridden at any time.
- Caution: once pre-set heights are saved to the allocated memory slots, the desk will automatically move the selected height once the number has been pushed.

Reset procedure:

- Press and hold the button until the desk lowers to its lowest height.
- Release and hold down the button again until the LED display reads "RST".
- The desk will automatically reset all legs to the lowest height by lowering 1cm before returning to the lowest height.
- A beep sound will be heard once this has been completed.

Child lock:

- Press and hold the UP and DOWN arrow buttons simultaneously for approximately 5 seconds.
- A beep sound will be heard and the LED display will read "---" indicating the desk is locked.
- Repeat the same process to unlock the child lock feature.

Setting maximum and minimum height:

- Move the desk to the maximum height you would like to set.
- Press and hold the "1" and "2" button and UP arrow button simultaneously and hold for approximately 5 seconds until a beep sound confirms the maximum height has been set.
- Move the desk to the minimum height you would like to set.
- Press and hold the "1" and "2" button and DOWN arrow button simultaneously and hold for approximately 5 seconds until a beep sound confirms the minimum height has been set.
- Repeat the same processes to unlock maximum and minimum height settings.

Using the Stand Reminder Timer Function:

- Press T button and the handset displays "0.0h".
- Select the countdown duration in increments of 30 mins (0.5 = 30 mins) by increasing with the up arrow and decreasing with the down arrow. The setting will automatically exit by itself after 2 seconds.
- Upon successful set up of the timer, the handset's display flashes every 5 seconds.
- When the countdown ends, users will be notified by beep sound.
- Sedentary countdown ranges between 30 mins to 9 hours, in steps of 30 mins.
- To cancel sedentary mode: Press T button and handset displays "X.Xh" (X denotes a numeral). Press the down arrow button till the handset displays "0.0h". The setting will automatically exit by itself after 2 seconds.