

USER GUIDE



Adjusting the desk height:

- Desk height is adjusted using the UP and DOWN arrow buttons.
- Buttons must be pressed and held to move the legs up and down.
- Releasing the button will stop movement.

Setting pre-set memory positions:

- Follow the steps above to raise or lower desk to the desired height.
- Press the M button quickly followed by a number (1 - 3) to save the pre-set height to the memory.
- Each memory number (1-3) can be programmed to a different height and can be overridden at any time.
- Caution: once pre-set heights are saved to the allocated memory slots, the desk will automatically move the selected height once the number has been pushed.

Reset procedure:

- Press and hold the down arrow button until the desk lowers to its lowest height.
- Release and hold down the button again until the LED display reads "RST".
- The desk will automatically reset all legs to the lowest height by lowering 1cm before returning to the lowest height.
- A beep sound will be heard once this has been completed.